

Installationsanweisung Aluminium Leiter

1.

Das abisolierte Leiterende sorgfältig durch Schaben, z. B. mit Hilfe eines Messers, von der Oxidschicht säubern.

Achtung:

Keine Bürsten, Feilen oder Schmirgelpapier verwenden; Aluminiumpartikel bleiben hängen und können auf andere Leiter übertragen werden.



2.

Unmittelbar nach Entfernen der Oxidschicht ist das Leiterende mit neutralem Fett einzureiben – z. B. mit säure- und alkalifreier Vaseline – und unmittelbar in der Klemme anzuschließen.

Die Arbeitsvorgänge sind zu wiederholen, wenn der Leiter abgeklemmt wurde und wieder anzuschließen ist.

Wartungshinweis:

Die vorgegebenen Drehmomente sind in regelmäßigen Wartungsintervallen zu überprüfen.

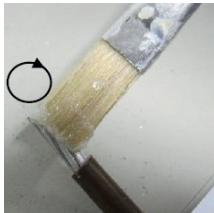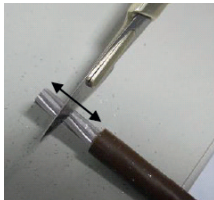

Installation instruction

Aluminium conductor

1.

Scrape the stripped end of the conductor carefully, eg. with a knife, to remove the layer of oxide.

Caution:

Do not use brushes, files or emery paper because particles of aluminium can be deposited on other conductors.

2.

After removing the layer of oxide, coat the end of the conductor immediately with a neutral grease, e.g. acid- and alkali-free Vaseline, and connect it to the terminal immediately.

Repeat the above procedure if at any time the conductor is disconnected and reconnected.

Maintenance note :

The specified torques must be checked at regular intervals maintenance .

